



# Using TZO.COM™ Dynamic DNS and a D-Link™ 804-HV router for Remote Viewing with your ADT™ DVR

**This document explains how to best setup an ADT™ DVR using a Dynamic or Static IP connection and TZO.COM™ Dynamic DNS. This setup is based on a D-Link™ 4 port wired router model 804-HV. In this document, you will learn how to:**

- Login and setup the D-Link™ 804-HV Router with the TZO Dynamic DNS service
- Configure the D-Link™ router to add services and open the ports needed for remote viewing and administration of your ADT™ DVR (Port 8016, 8200, 8201 and 10019)
- Configure the IP address, gateway and DNS of the DVR so it works with the D-Link™ router.
- Connect to your ADT™ DVR from any Windows based PC on the same network
- Connect to your ADT™ DVR from any REMOTE PC over the Internet
- Troubleshooting your DVR if you are having trouble connecting

Please Note: The product names used in this document are for identification purposes only. All trademarks and registered trademarks are the property of their respective owners.

## **BEFORE YOU BEGIN SETUP THE ROUTER AND DVR ACCORDING TO THE MANUAL**

### **Initial D-Link™ router setup:**

You should SETUP THE D-LINK™ ROUTER for your Internet Connection according to the ISP and D-Link™ Manual. Make sure you can browse the Internet and use the Internet normally before you continue.

\* If you use PPPoE DSL, make sure you set the CONNECT MODE to ALWAYS-ON under the WAN Settings during configuration of the D-Link™ Router.

### **Initial DVR Recording and Camera setup:**

You should now setup the DVR for your preferences using the Manual/Guide that came with your DVR. You do not need to setup the IP address on the DVR at this point, we cover that below to ensure the IP is in the desired format for this document. If the DVR is already setup, continue below for details on setting the IP address properly on the DVR.


## Setting up the TZO Dynamic DNS

---

### SIGNING UP AND ENABLING THE D-LINK™ ROUTER WITH TZO DYNAMIC DNS:

**A)** Make sure you are signed up with a trial account, or have paid for a TZO subscription (Standard or Premier service) \*\*If you do not have a TZO Key and Domain Name selected, sign up for a free 30 day trial domain at <http://Signup.tzo.com> as shown below.

**B)** Enter your choice for a domain name (each location/DVR must be unique) and enter the email address you wish to use. Click the CREATE MY FREE TRIAL DOMAIN NAME button and TZO will send your TZO Domain Name and TZO key to the email address you used.

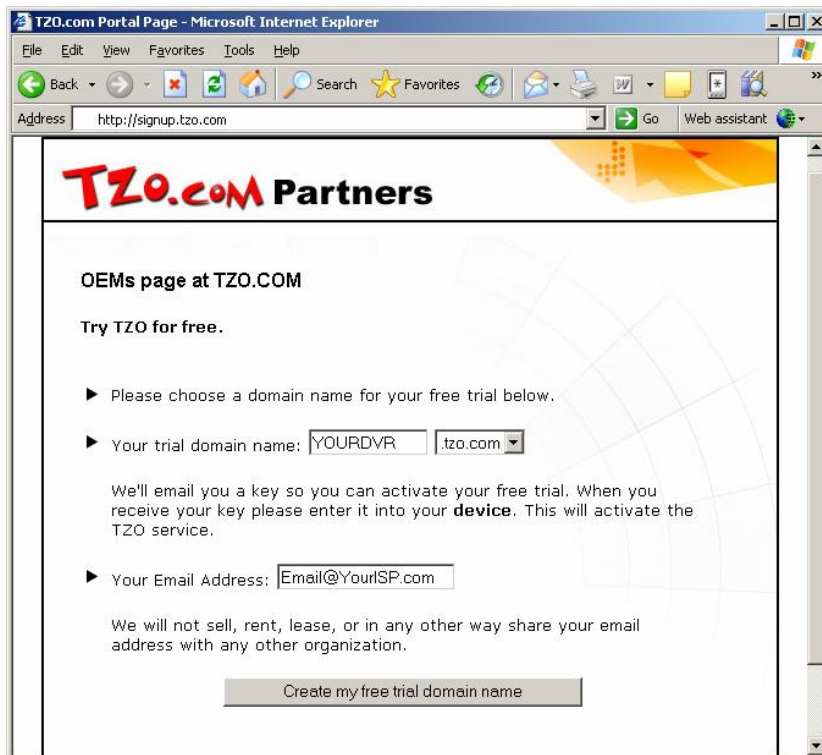

The screenshot shows a Microsoft Internet Explorer browser window titled "TZO.com Portal Page - Microsoft Internet Explorer". The address bar shows "http://signup.tzo.com". The page content includes the "TZO.com Partners" logo, the heading "OEMs page at TZO.COM", and the text "Try TZO for free." Below this, there are two main sections: "Please choose a domain name for your free trial below." and "Your trial domain name: YOURDVR .tzo.com". A note states: "We'll email you a key so you can activate your free trial. When you receive your key please enter it into your device. This will activate the TZO service." The second section is "Your Email Address: Email@YourISP.com". A disclaimer reads: "We will not sell, rent, lease, or in any other way share your email address with any other organization." At the bottom, there is a button labeled "Create my free trial domain name".

**C)** Once you have the TZO Key, Domain name and Email address used written down or available from your email, log into your router by going to <http://192.168.1.1> and using your username and password to log into the router. (default username is admin and password is blank)

**D)** Once you are logged into the router, click the **ADVANCED** tab at the top. Under the **ADVANCED** section, select **DDNS** from the left hand menu (blue buttons). As shown in the screenshot below, enable the TZO Dynamic DNS service, and then input the Domain Name, TZO Key/Password and Email Address/Username into the router DDNS setup. Click Apply. You now have setup the TZO DDNS properly.

This domain name is good for 30 days for testing. After 30 days the TZO Dynamic DNS will expire. You can purchase the TZO standard Dynamic DNS service for this domain name at <http://www.tzo.com/order.html> before it expires. When ordering, use the email address you used when signing up.



## **D-LINK™ PORT FORWARDING AND OTHER ROUTER CONFIGURATION:**

---

### **\*IMPORTANT NOTE before you start on PORT FORWARDING and Port Blocking:**

\* If DSL is being used for a broadband connection to your DVR, check with your ISP to make sure that your DSL modem is in "bridge mode" to assure that there is no NAT server running on the DSL modem itself. If this is the case, you will have extreme difficulty in port forwarding and getting the DVR to work. You can call your ISP and ask if your DSL modem can be configured for Bridge mode and allow your router to authenticate with the DSL signon routine instead of the DSL Modem.

**Step 1)** The first step is to log in to the router. Log into the router by going to <http://192.168.1.1> and using your username and password to log into the router. (default username and pw is admin/blank)

**Step 2)** Once you log into the router, Click the **ADVANCED TAB** in the top menu. We need to add 4 ports (8016, 8200, 8201 and 10019) to the Virtual server section in order to view the DVR remotely. These 4 ports are added to the server list in 3 separate processes as described below.

**Step 3)** In the list of Virtual Servers, we will add port 8016 first, then ports 8200-8201 in a second process, and finally port 10019 in the third process. In order to add a new service for port 8016, fill in the blanks as shown in the screenshot below and then click the **APPLY** button.

**Select Enabled**

**Name: ADTDVR-1**

**Private IP: 200**


**Protocol: Both**

**Private Port: 8016**

**Public Port: 8016**

**Schedule: Always**

This will add in the port 8016 service to the Virtual Server list. Repeat this for the additional ports as shown in steps 4 and 5 below.

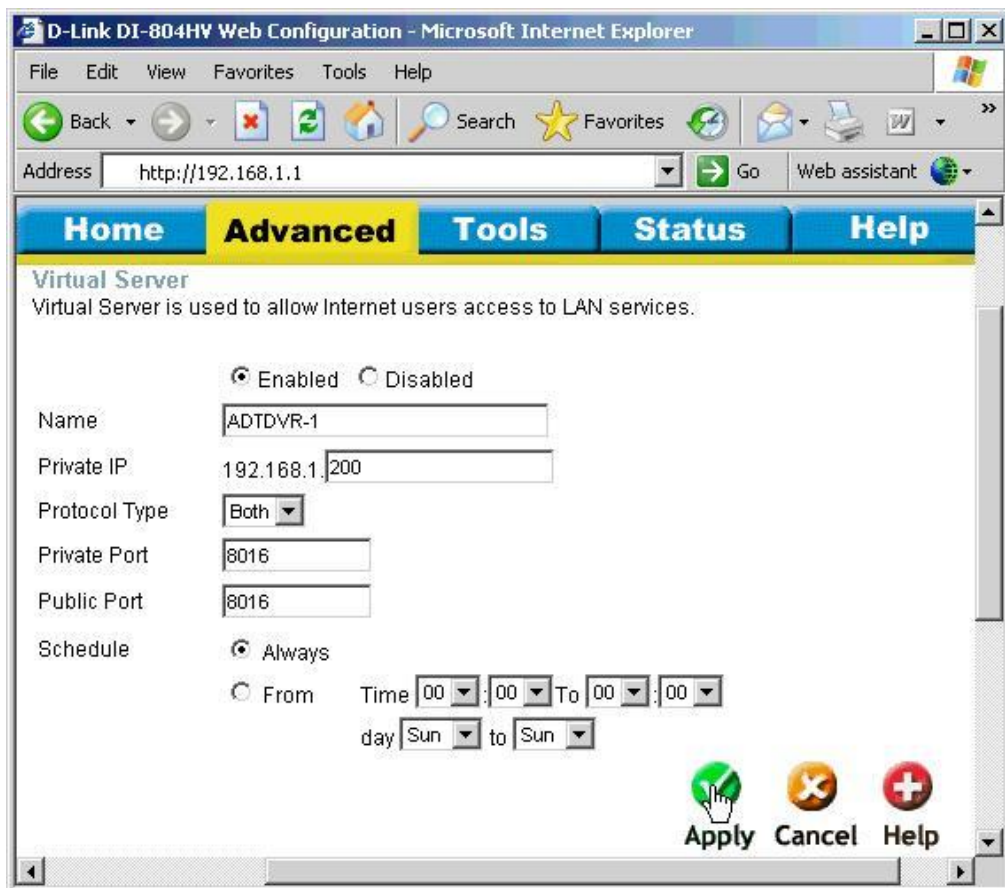

**Step 4)** In order to add a new service for port 8200-8201, fill in the blanks as shown in the screenshot below and then click the **APPLY** button.

**Select Enabled**

**Name: ADTDVR-2**

**Private IP: 200**


**Protocol: Both**

**Private Port: 8200-8201**

**Public Port: 8200-8201**

**Schedule: Always**

This will add in the ports 8200-8201 service to the Virtual Server list. Repeat once more as shown in Step 5 for port 10019

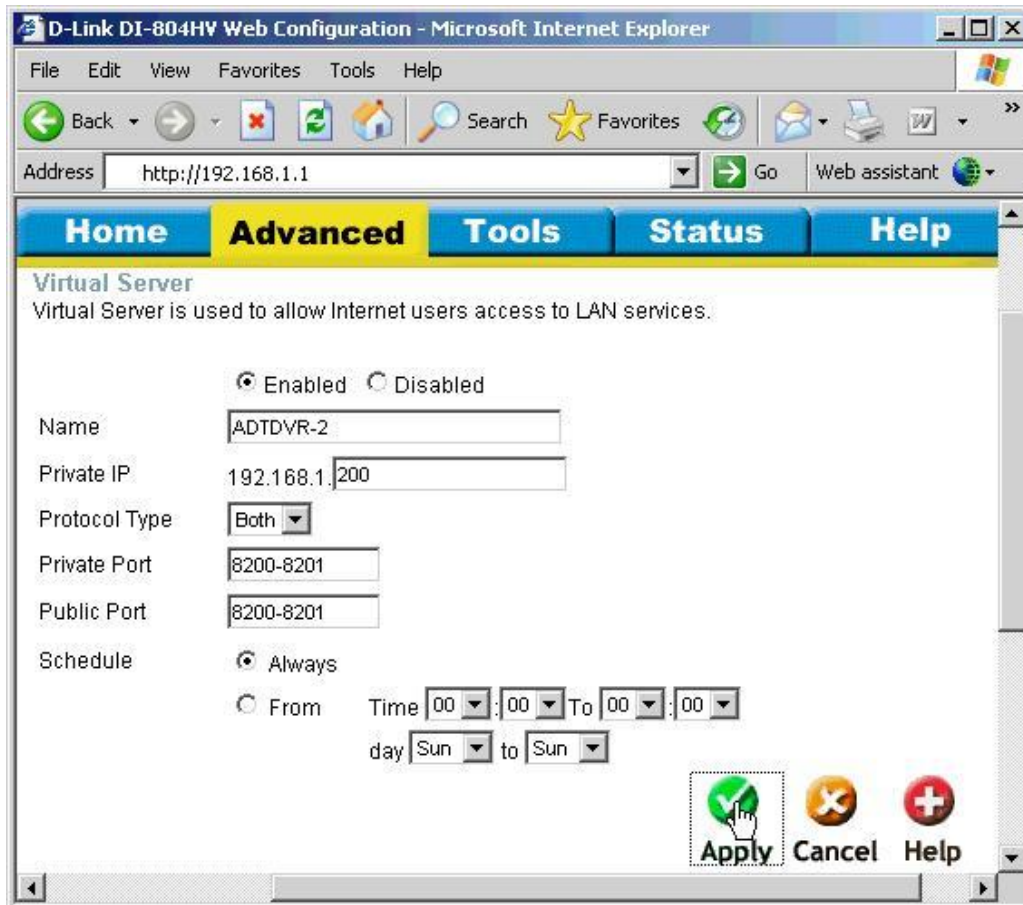

**Step 5)** In order to add a new service for port 10019, fill in the blanks as shown in the screenshot below and then click the **APPLY** button. This is the last step for adding ports. Continue to the next step below once the router resets.

**Select Enabled**

**Name: ADTDVR-3**


**Private IP: 200**

**Protocol: Both**


**Private Port: 10019**

**Public Port: 10019**

**Schedule: Always**

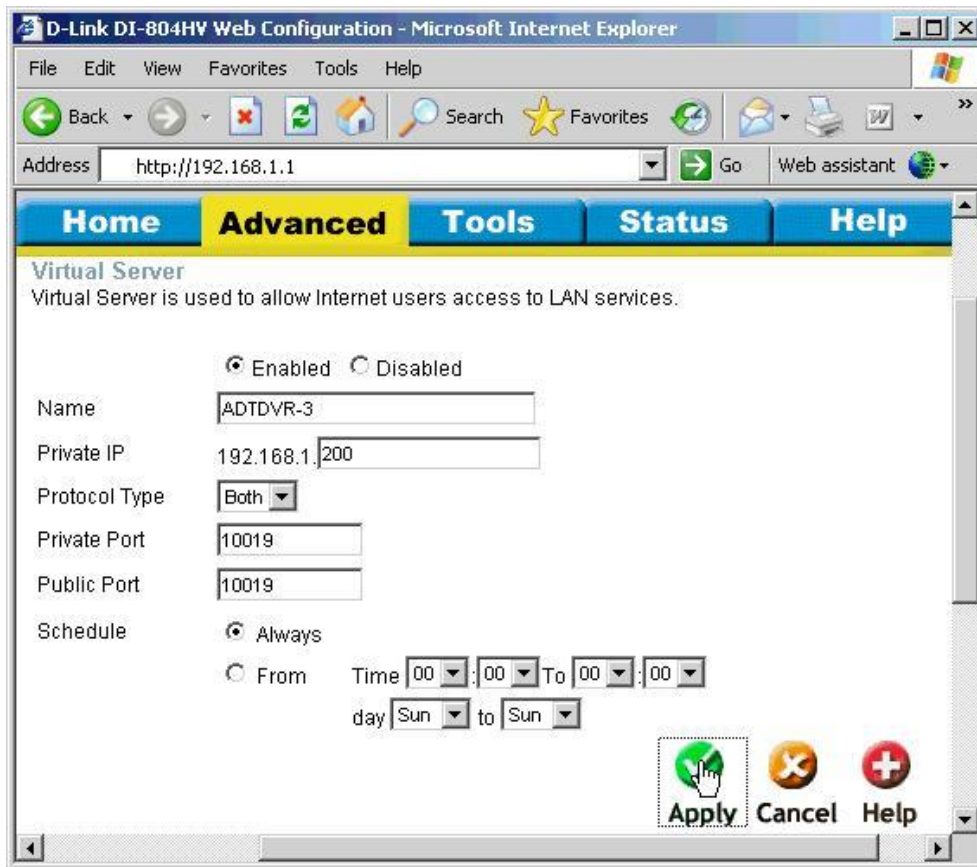


**Step 6)** Check that your **VIRTUAL SERVER LIST** looks similar to the screenshot shown below: Your VIRTUAL SERVER list will have many more services shown, but you should make sure that the ADTDVR services are listed as shown below, and that the ports and IP's match exactly as shown in the screenshot or the DVR remote viewing may not work. If it looks similar, you have completed the port forwarding step and can now logout of the D-Link™ (closing your browser)

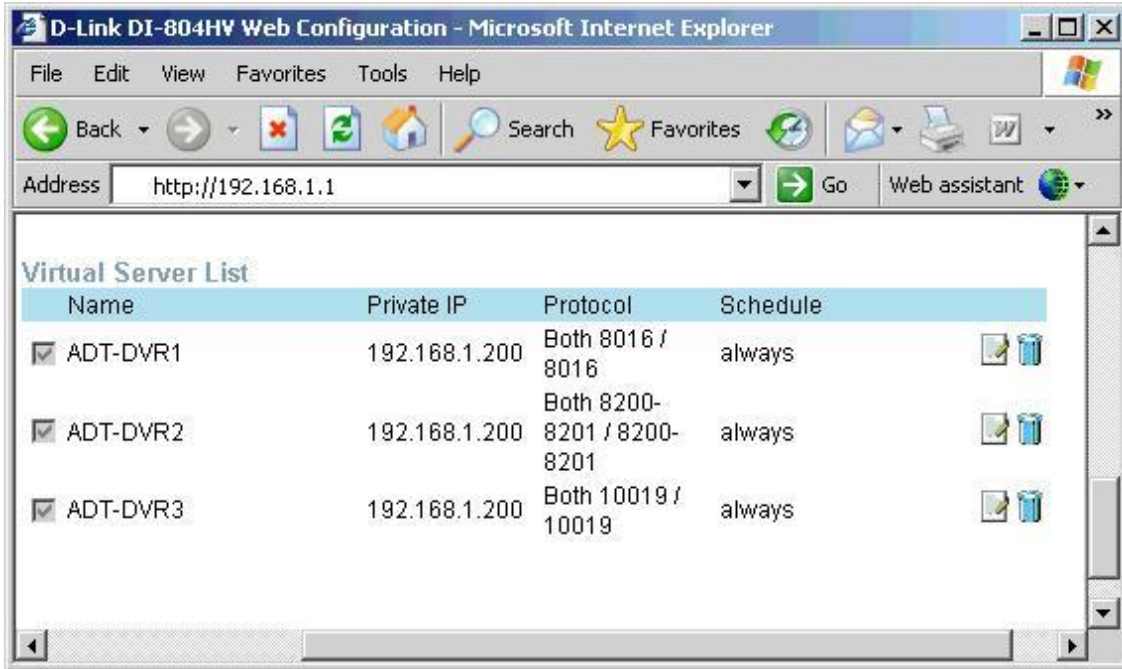

**Step 7)** (Optional) – Enabling Remote Administration in the router can be a smart idea if you want to remotely administer the router to open ports, change port forwarding, configure the TZO Dynamic DNS and more. If you do not enable remote administration, you will have to login to the router locally.

**\*IMPORTANT:** If you enable remote management, be sure to set a different password other than the default password used in this document. You can also change the remote management port to a custom port you select. Avoid port 8016, 8200, 8201 and 10019 since these are used by the DVR. Under the **TOOLS TAB**, scroll down to **REMOTE MANAGEMENT** and then setup the REMOTE MANAGEMENT features as shown in the screenshot below. Using the D-Link™ router, you can only set a specific IP address to control from, so there is some limitation in this router for remote management.

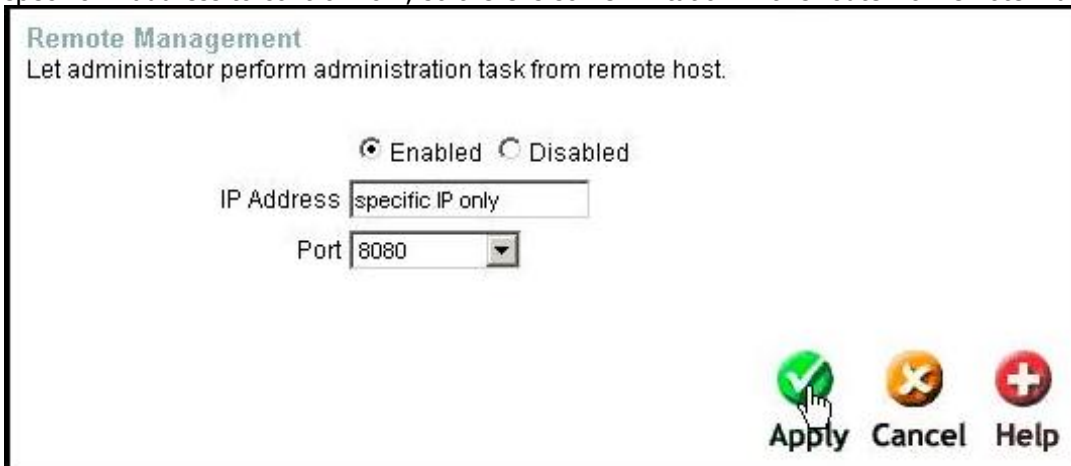

## CONNECTING THE DVR TO THE ROUTER AND ASSIGNING THE IP ADDRESS


---

The first step in the whole process is to setup the DVR and the cameras. Consult your DVR manual for setup details as explained at the beginning of this document.


Once the DVR is powered up and the cameras are setup, you should then connect the DVR to the router using a standard RJ-45 ETHERNET cable. Once you connect the DVR to the router, you need to enter the menu of the DVR by following the exact steps below:

**1)** On the ADT™ DVR's, you **push the MENU button** – located on the bottom left side of the DVR front panel.

**2)** After you push the MENU button, the password menu screen comes up as shown below. Enter the password (default is 4321) and press the ENTER key (round button in the middle of the cursor buttons)

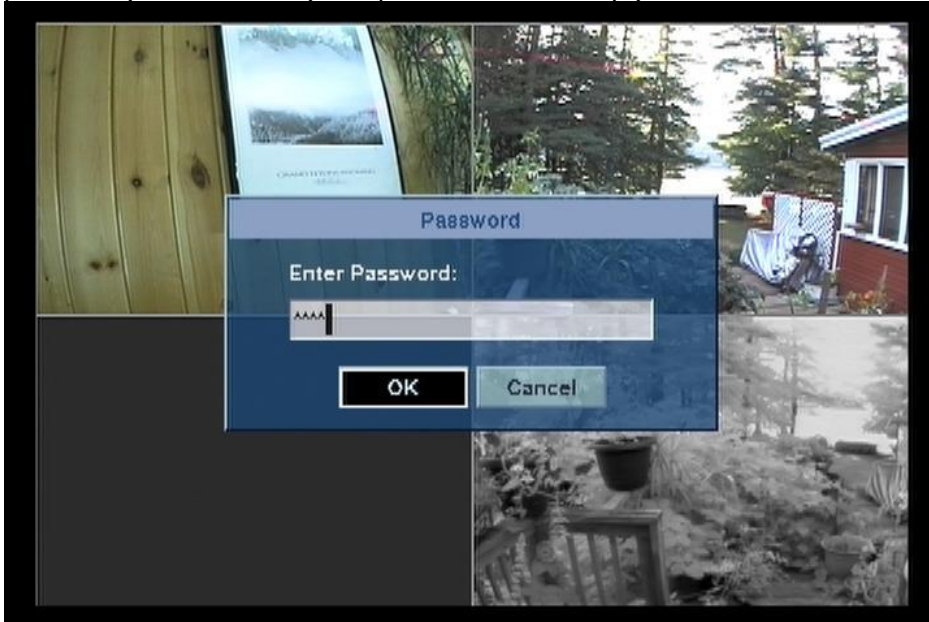


**3)** You will now see a screen similar to the one shown below – this is the Main Setup screen. Use the cursor buttons to scroll over and up to NETWORK SETUP. Once you select the NETWORK SETUP, Press the ENTER button.

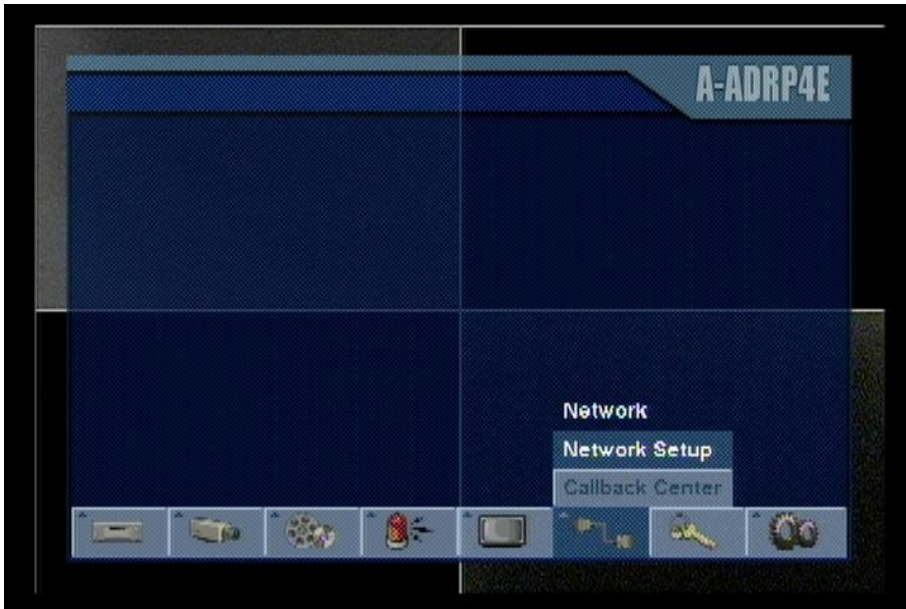

**4)** You will now see a screen similar to the one shown below – this is the Network setup screen. Use the down and right buttons to scroll down to CONNECTION and make sure its on LAN mode. Once you select the LAN mode, use the right cursor to select SETUP and then press the ENTER button.



5) Now that you are in the LAN setup screen, edit the network settings as shown in the screenshot below. Use the cursor buttons to change the IP address, and then adjust the gateway IP. You should now make sure your DVR's Network and IP settings are setup to work with your router. The important settings are listed below:

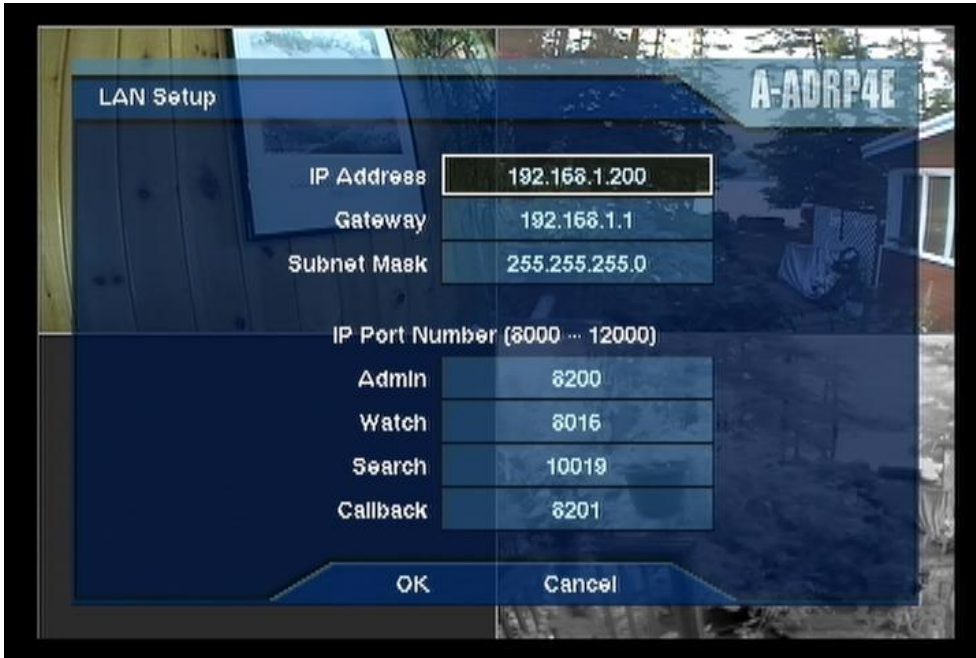

**IP ADDRESS:** 192.168.1.200

**Subnet:** 255.255.255.0

**Gateway:** 192.168.1.1

6) Once you have set the DVR to the IP settings above, you need to restart the DVR. Once the DVR is back up and running, You can now start the testing to make sure everything works.

## CONNECTING TO YOUR ADT™ DVR AND VIEWING LIVE AND RECORDED VIDEO - (INTERNAL VIEWING ON THE SAME NETWORK)

---

Before you attempt to test the configuration from a remote location, you should perform some tests internally (on the same network where the DVR is located) and attempt to connect to the DVR using the ADT™ IRAS software.

### USING IRAS REMOTE SOFTWARE TO CONNECT:

---

Using the IRAS software that came with your DVR, you can connect to the DVR by going to the INTERNAL IP address of the DVR.


### Follow the steps below to connect with the IRAS software:

**Step 1)** Run the IRAS software. The first step is to add the internal remote site for viewing the DVR. Once the IRAS software opens, click in the upper left corner as shown in the screenshot shown below. Doing this will enter the LOCAL SETUP where you need to add the remote site.

\*DO NOT USE the TZO Domain name when connecting internally, in most cases the domain name WILL NOT WORK from the internal network. Once you have tested the INTERNAL IP with success, you can then try the domain name from a remote location.



**Step 2)** Once you click the LOCAL SETUP as shown in the screenshot above, you will see a screen similar to the one below. Click on the REMOTE SITE tab as shown. Then click the ADD button in the lower left of this screen and continue to step 3 below.

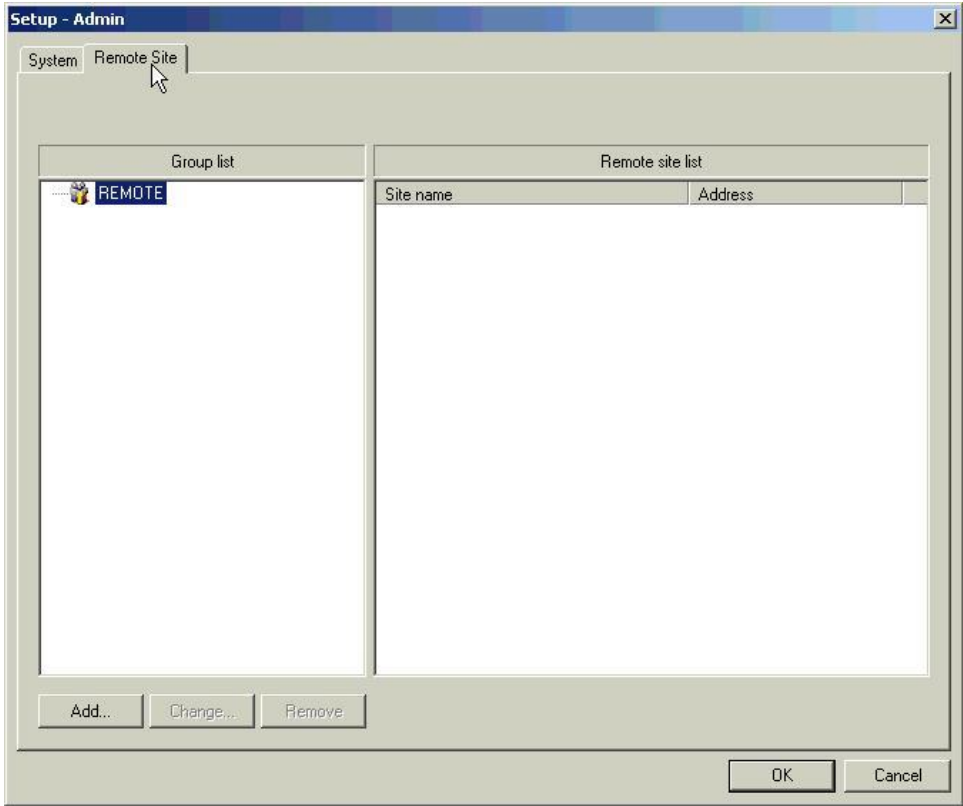

**Step 3)** Once you click the ADD button in the lower left as shown in step 2, you will see the ADD SITE dialog box. Enter in the Site name as INTERNAL and enter the IP address that you set the DVR to in this tutorial (192.168.1.200). Then enter the username admin and the default password of the DVR is 12345678 and then click OK to add this site.

\* If you have changed the password, or added other usernames, you can use that username and password combination instead. This example shows using the admin username and default password


**IMPORTANT NOTE: DO NOT CHECK THE "USE DVRNS (DVR Name Service) checkbox, this will cause the TZO DDNS to fail"**

The screenshot shows the 'Add Site' dialog box with the following fields and options:

- Reference Group:** A dropdown menu showing 'REMOTE' with an 'Add...' button.
- Remote Site Setup:**
  - Site name: ADT INTERNAL
  - IP address: 192.168.1.200 (with a 'Port...' button)
  - Use modem
  - Use DVRNS(DVR Name Service) (This checkbox is circled in red and has a red arrow pointing to it from the text 'DO NOT CHECK THIS!')
- Login Setup:**
  - User ID: admin
  - Password: \*\*\*\*\*
  - Confirm password: \*\*\*\*\*
  - No password

At the bottom of the dialog are 'OK' and 'Cancel' buttons.


**Step 4)** Once you click OK as described in Step 3, your INTERNAL site “bookmark” will be added to the remote sites list as shown in the screenshot below. Click the OK button once you verify the INTERNAL site is listed in the remote site list.

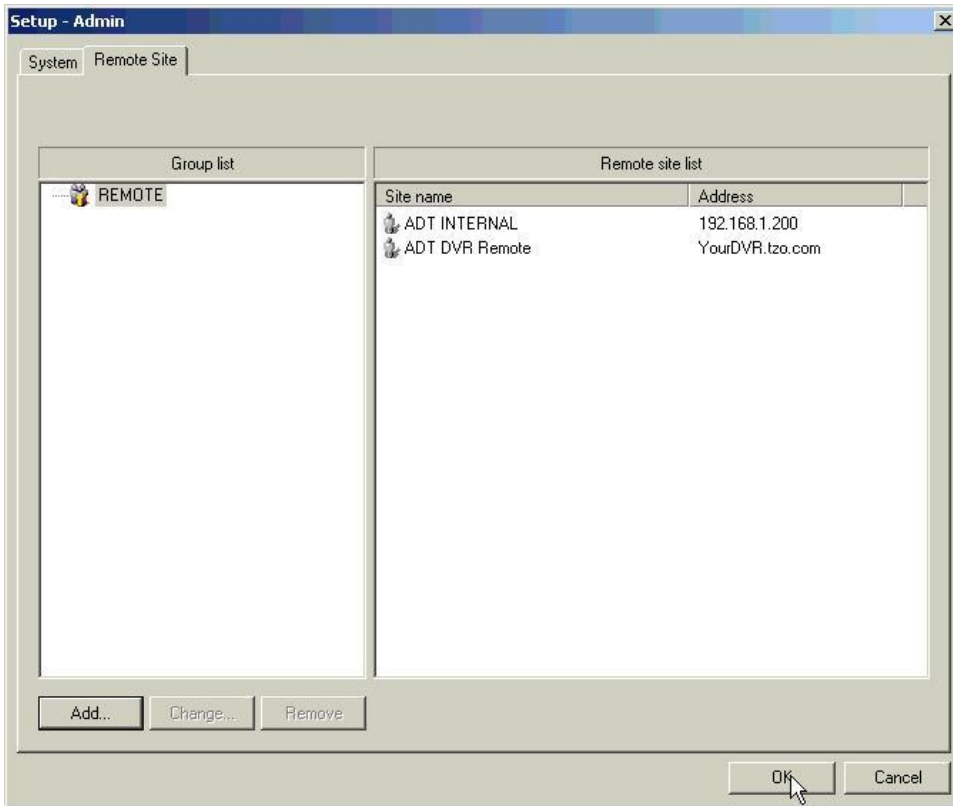


**Step 5)** Once you click OK, you will return to the main IRAS screen as shown below. You will now be able to click on the (+) sign in the REMOTE SITE pane in the upper left corner. This will expand the REMOTE SITES. You will then see the INTERNAL site that we added in earlier steps. Double click the INTERNAL site and you will be connected to the DVR



**Step 6) You are now connected!** You can view live video by going to the WATCH section of the IRAS software. In order to WATCH live video, click the EYE icon in the top left corner as shown in the screenshot below.

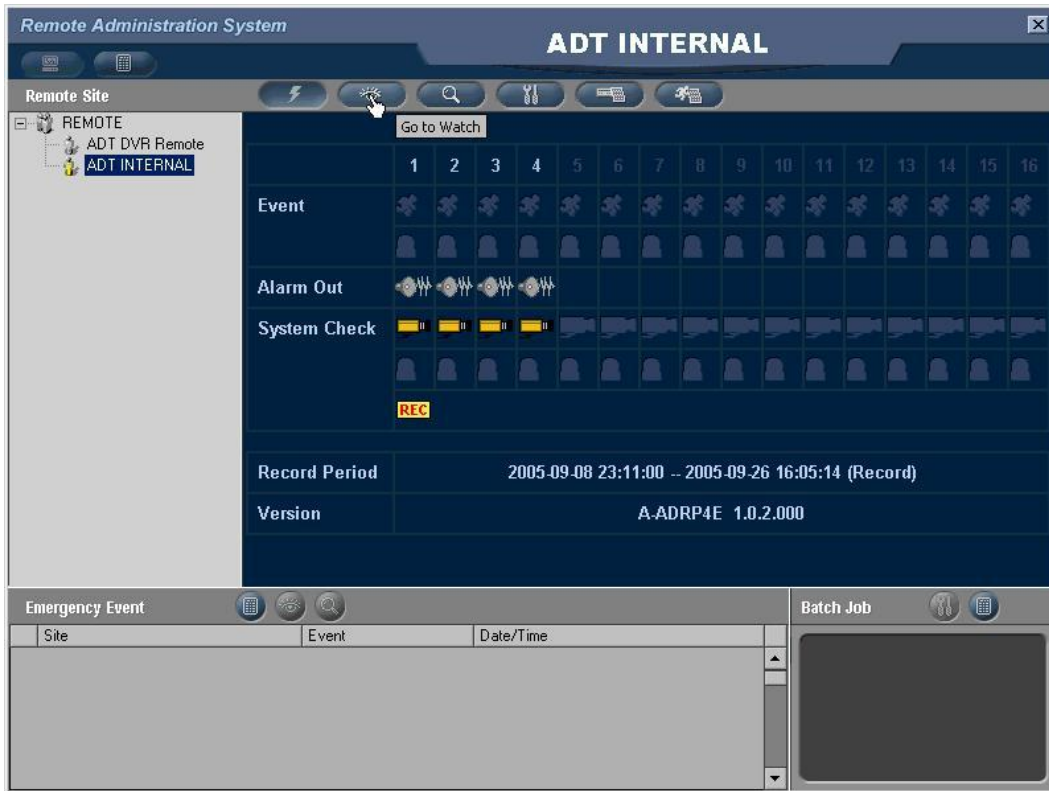

**Step 7)** Once you click the WATCH, you will then be brought to the main WATCH video screen of the ADT™ DVR as shown in the screenshot below.

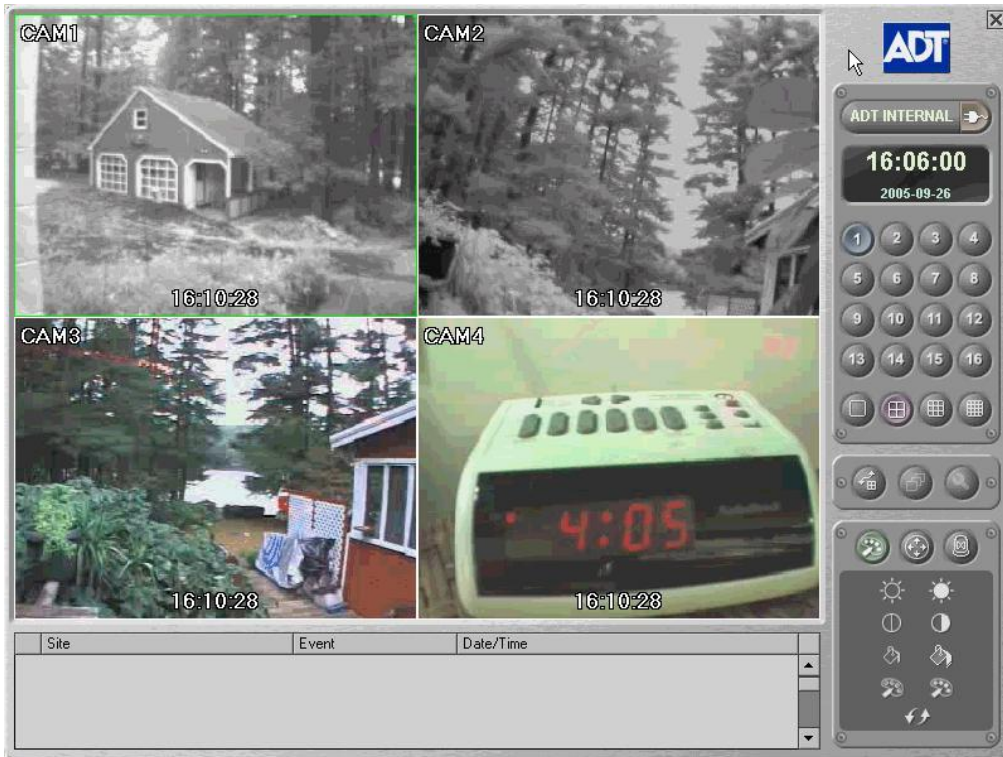

Using the IRAS WATCH application you can view live video. For complete details on using the DVR with the IRAS software see the manuals provided with your DVR.

\* If you get the error or cannot connect to the DVR and see either live or recorded video, check the IP, DVR IP and Port settings and status of the DVR and try again. Consult the DVR manual for more troubleshooting procedures

## CONNECTING TO YOUR ADT™ DVR AND VIEWING LIVE AND RECORDED VIDEO - (REMOTE VIEWING OVER THE INTERNET)

### USING IRAS REMOTE SOFTWARE TO CONNECT:


Using the IRAS software that came with your DVR, you can connect to the DVR by going to the TZO DOMAIN NAME of the DVR. You first need to add the DOMAIN NAME to the Remote sites list in the IRAS software before you can connect.

### Follow the steps below to connect with the IRAS software from a remote location:

**Step 1)** Run the IRAS software. The first step is to add the remote site for viewing the DVR. Once the IRAS software opens, click in the upper left corner as shown in the screenshot shown below. Doing this will enter the LOCAL SETUP where you need to add the remote site.



**Step 2)** Once you click the LOCAL SETUP as shown in the screenshot above, you will see a screen similar to the one below. Click on the REMOTE SITE tab as shown. Then click the ADD button in the lower left of this screen and continue to step 3 below.

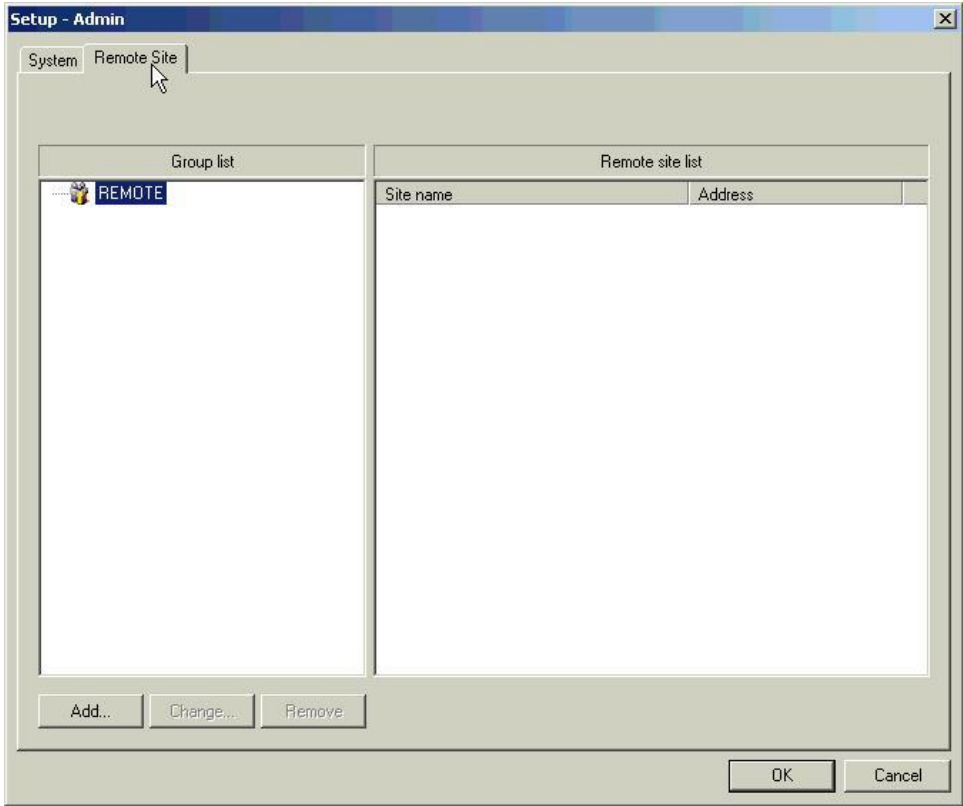


**Step 3)** Once you click the ADD button in the lower left as shown in step 2, you will see the ADD SITE dialog box. Enter in the Site name as REMOTE DVR and enter the TZO DOMAIN NAME that you set the DVR to in this tutorial (YourDVR.tzo.com was the example used, your domain name will be different). Then enter the username admin and the default password of the DVR is 12345678 and then click OK to add this site.

**IMPORTANT NOTE: DO NOT CHECK THE "USE DVRNS (DVR Name Service) checkbox, this will cause the TZO DDNS to fail"**

\* If you have changed the password, or added other usernames, you can use that username and password combination instead. This example shows using the admin username and default password

**DO NOT CHECK THIS!** →  Use DVRNS(DVR Name Service)

**Step 4)** Once you click OK as described in Step 3, your REMOTE site "bookmark" will be added to the remote sites list as shown in the screenshot below. Click the OK button once you verify the REMOTE site is listed in the remote site list and your TZO Domain name shows up under the ADDRESS field as shown below.

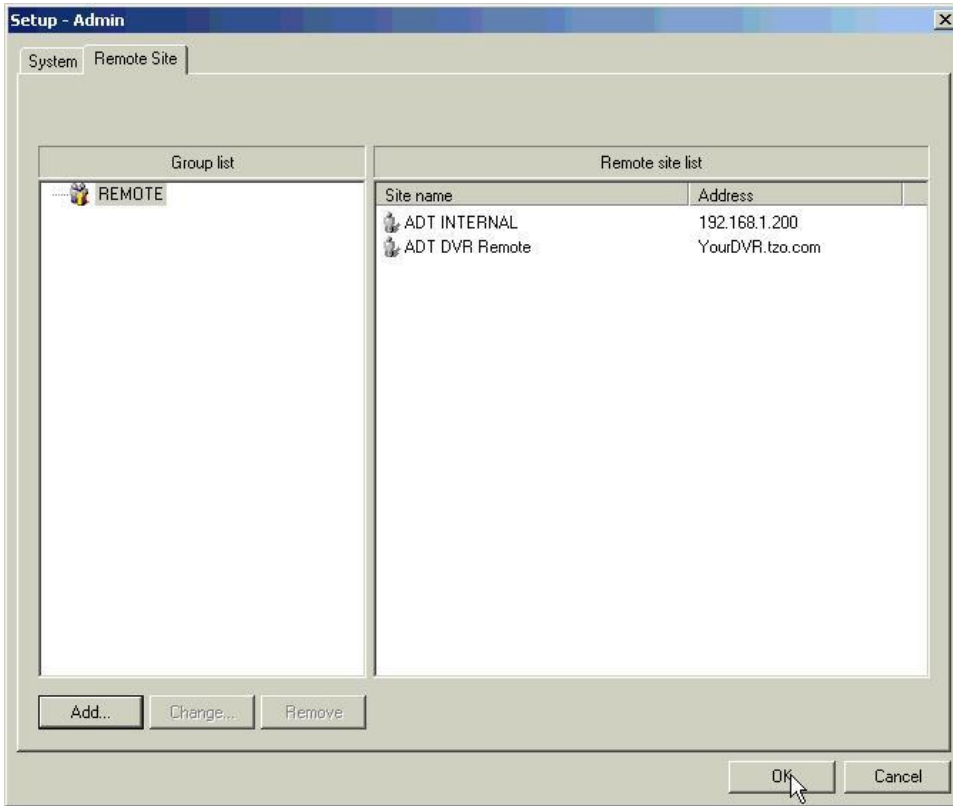


**Step 5)** Once you click OK, you will return to the main IRAS screen as shown below. You will now be able to click on the (+) sign in the REMOTE SITE pane in the upper left corner. This will expand the REMOTE SITES. You will then see the REMOTE site that we added in earlier steps. If you have setup the DVR properly and forwarded all the ports properly in the router, you should connect to the DVR. Double click the REMOTE site and you will be connected to the DVR.



**Step 6) You are now connected!** You can view live video by going to the WATCH section of the IRAS software. In order to WATCH live video, click the EYE icon in the top left corner as shown in the screenshot below.



**Step 7)** Once you click the WATCH, you will then be brought to the main WATCH video screen of the ADT™ DVR as shown in the screenshot below.

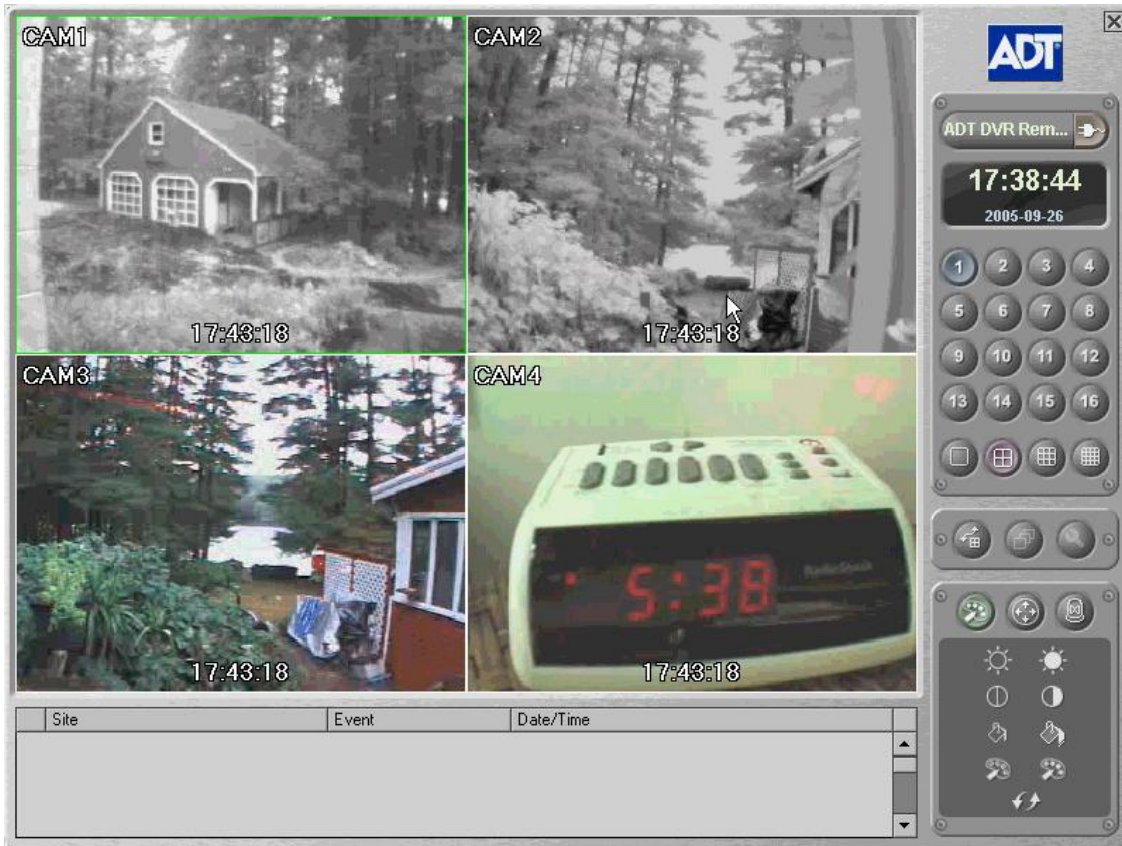

Using the IRAS WATCH application you can view live video. For complete details on using the DVR with the IRAS software see the manuals provided with your DVR.

\* If you get the error or cannot connect to the DVR and see either live or recorded video, check the IP, DVR IP and Port settings and status of the DVR and try again. Consult the DVR manual for more troubleshooting procedures

## TROUBLESHOOTING YOUR DVR - INTERNAL AND REMOTE CONNECTIONS

---

\* If you get the error UNABLE TO CONNECT cannot connect to the DVR and see either live or recorded video, check that the TZO DOMAIN NAME is typed correctly. Review the below steps if you still can't connect?

### STEP 1)

If you have having trouble connecting to the DVR, Contact an individual at the same location where the DVR is located and have them check that the DVR is powered ON and that they can connect to the DVR using the INTERNAL IP ADDRESS. Then have them use a browser and go to a few websites externally to make sure the Internet connection is up. If that works, that means the DVR is up and running fine on the internal network, so there could be a few things that could be causing the problem as explained below:

**A)** ISP has recently blocked some ports required – this means the IRAS software will not work


**B)** The TZO DOMAIN NAME may not be synched up with the IP address of the cable or DSL modem  
See below steps for troubleshooting TZO:

**C)** The router could be having problems with the port forwarding. Check the port settings and try rebooting the router

### To Check the TZO Dynamic DNS is working:

---

Check the IP that TZO is pointing to. You can verify the IP address that TZO is showing in our DNS by PINGING the domain name. Start a DOS prompt session by clicking the START button, selecting RUN, and then enter CMD (as shown below) and click OK:

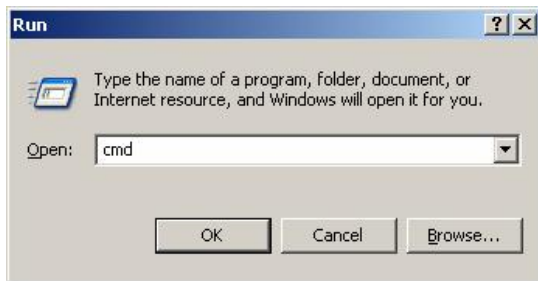

### At the Dos Prompt type:

PING YOURDVRName.TZO.COM

(\* use the domain name of your DVR – in our example shown below we use YOURDVRName.TZO.COM )

-----PING EXAMPLE-----

**C:\Documents and Settings\User>ping YourDVRName.tzo.com**  
**Pinging YourDVRName.tzo.com [123.123.123.123] with 32 bytes of data:**

**Reply from 123.123.123.123: bytes=32 time=3ms TTL=64**

**Reply from 123.123.123.123: bytes=32 time=1ms TTL=64**

**Reply from 123.123.123.123: bytes=32 time=1ms TTL=64**

**Reply from 123.123.123.123: bytes=32 time=1ms TTL=64**

**Ping statistics for 123.123.123.123:**

**Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),**  
**Approximate round trip times in milli-seconds:**  
**Minimum = 1ms, Maximum = 3ms, Average = 1ms**  
-----END PING EXAMPLE-----

Write this IP address down and continue with the steps below. If you get UNKNOWN HOST, you may not be using the right domain name, may have spelled it wrong, or your TZO Dynamic DNS subscription may have expired. To check the expiration, use your TZO Key to log into the TZO CONTROL PANEL at <https://controlpanel.tzo.com>

Once you log in, you can see the EXPIRATION DATE in the main window. If it's expired, you can reorder the TZO service at the TZO website (<http://www.tzo.com>) or by calling Toll Free at 877-433-6865 or outside the US and Canada at 978-433-6865

**3)** Verify the WAN IP address of the router. This WAN IP will be the IP address that your cable or DSL modem uses to communicate with the rest of the Internet. To do this, log into the router and check the STATUS page. Write this WAN IP address down. \_\_\_\_\_

**4)** From any PC on the same internal network as the DVR, launch a browser and go to <http://www.mywanIP.com> - Write down the IP address shown – this is your External IP that your cable/DSL modem hands to the router. In this example, we will use 123.123.123.123 as our IP

The PING of the domain name should match step 3 and 4 above. This means that TZO is working and pointing at the right IP address, and it could be one of the other issues above. If it does NOT match up, try rebooting the router. Check again.

### **Step 1)**

The First thing to check is to make sure the DVR works on the inside of the network using the Internal LAN IP address of 192.168.1.200. Use your Internet Explorer browser or viewing application provided with your DVR to connect using the above internal LAN IP address. If you cannot connect, review the setup using the connection guide. Make sure you have set the static IP above on the DVR. Check the Gateway and Network mask to match the connection guide depending on your network setup.

Success? Did you connect to the DVR from the inside of the network? If yes, continue to step 2  
If not, re-review the setup, make sure everything is powered up and ready, repeat step 1 until you connect

### **Step 2)**

Once you connect from the INSIDE of the network, you need to attempt to connect externally after you verify that the port forwarding is correct in the router (if you are using a router). You should also check that you can get to websites such as yahoo.com, cnn.com and other websites to assure your Internet connection where the DVR is location is up and working properly.

**A)** First verify the WAN IP address of the router, this will be the IP address you will use for your tests externally. Once you can connect using the IP, we will then test that TZO DDNS will work.

**B)** From any PC on the same internal network as the DVR, launch a browser and go to <http://www.mywanIP.com>

**C)** Write down the IP address shown – this is your External IP that your cable/DSL modem hands to the router. In this example, we will use 123.123.123.123 as our IP

**D)** Make sure the TZO DDNS has been installed on either a PC at that location or in the router. Note the domain name that you used. In this example, we use YourDVR.tzo.com

**E)** Leave that location as soon as possible so you can test the current IP. You can also call a co-worker or friend at a different location that DVR IRAS Viewing application. Using a different ISP if possible, connect to the Internet and attempt to connect to the DVR using the WAN IP address written down in step C.

Success? If yes, try to connect with the Domain name you noted in step D above. Success? If not, try to PING the domain name as shown below in Step 4.

### Step 3)

Start a DOS prompt session, at the prompt type:

#### **A) PING YourDVRName.TZO.COM**

(\* where domain name is the domain name of your DVR – in our example shown below we use YOURDVRName.TZO.COM )

```
C:\Documents and Settings\Eric>ping YourDVRName.tzo.com
Pinging YourDVRName.tzo.com [123.123.123.123] with 32 bytes of data:
```

```
Reply from 123.123.123.123: bytes=32 time=3ms TTL=64
Reply from 123.123.123.123: bytes=32 time=1ms TTL=64
Reply from 123.123.123.123: bytes=32 time=1ms TTL=64
Reply from 123.123.123.123: bytes=32 time=1ms TTL=64
```

```
Ping statistics for 123.123.123.123:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 1ms, Maximum = 3ms, Average = 1ms
```

If the above IP matches the WAN IP address that you wrote down in step 2C, this means TZO DDNS is pointing at the right address and the DDNS isn't the problem. You should be able to connect just fine. If not, contact your DVR company and make sure your DVR viewing application contains DNS resolution. If your IP address in the Ping matches your WAN IP you recently wrote down in 2C, and yet your DVR viewing application cannot connect with the domain name but it CAN CONNECT with the IP, this means your DVR application may not have DNS resolution. You will have to use the IP address to connect by doing a PING, verifying the IP and then using the IP returned from the Ping to connect

-----  
**If you see "0.0.0.0", "Destination specified is invalid" or  
"Ping request could not find host" from the PING results:**  
-----

**If you are Running TZO software:** This above means the TZO software is not running, has been shut down or not installed/setup yet

**If you are using TZO in a router:** This above means your router has not properly updated the TZO DDNS, check the DDNS settings in the router and try rebooting the router.

---

**If you see a different IP address than you wrote down in Step C above?**

---

**If you are Running TZO software:** This above means the TZO software is not running, has been shut down or not installed/setup yet, or may have been set wrong. Check the TZO software and make sure the SIGNON options in TZO is set to DEFAULT MODE

**If you are Using TZO in a router:** This above means your router has not properly updated the TZO DDNS, check the DDNS settings in the router and try rebooting the router. Double check that the router matches EXACTLY as shown in our router suggestion table Try upgrading the firmware, rebooting the router. Also check DSL Timeout and set the timeout to "0" if you are using DSL. If you have "connect on demand" try disabling that

---

**If you see a LAN IP address come back from the ping?  
If your IP shows up as 192.168.X.X, 172.X.X.X or 10.X.X.X?**

---

**If you are Running TZO software:** This above means the TZO software is may have been set wrong. Check the TZO software and make sure the SIGNON options in TZO is set to DEFAULT MODE

**If you are Using TZO in a router:** This above means your router has not properly updated the TZO DDNS. If you are using DSL, most likely your DSL setup is causing this issue. Contact your ISP about your DSL modem and ask them if the DSL modem is acting as a NAT server. If your DSL modem is acting as a NAT firewall, ask the ISP to put the DSL modem in Bridge mode and have them assist you in using the router to login and authenticate to the DSL instead of using the DSL modem to do this.

-----END-----